
DOOR OPERATOR MOUNTING

10mm bolts with spring washers and nuts or flat washers and nylocks at no more than 1200mm spacing.

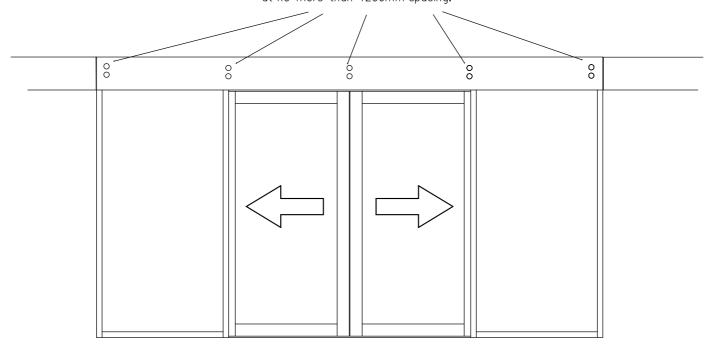

VIEWED FROM INSIDE LOOKING OUT

 $\ensuremath{\mathsf{NDTE}}$: Tek screws may be used for positioning but $\ensuremath{\mathsf{NDT}}$ for final fixing

NDTE : Suitable fixings are Bolts, Coachscrews and masanory anchors

OPERATOR MOUNTING



Always refer to website for current drawing

Rubek Automatic Doors
Unit 2, 79 Achievement Way
Wangara, WA, 6065
Tel (08) 9302 3200
Fax (08) 9302 3400
Web www.rubek.com.au
email sales@rubek.com.au
Copyright Rubek Industries 1994—2022

Date	Scale
12-02-2016	N/A
Drawn by	Sheet
TJD	10F1
Checked by	File name
RVS	RBK46