


DOOR OPERATOR MOUNTING

10mm bolts with spring washers
and nuts or flat washers and nylocks
at no more than 1200mm spacing.

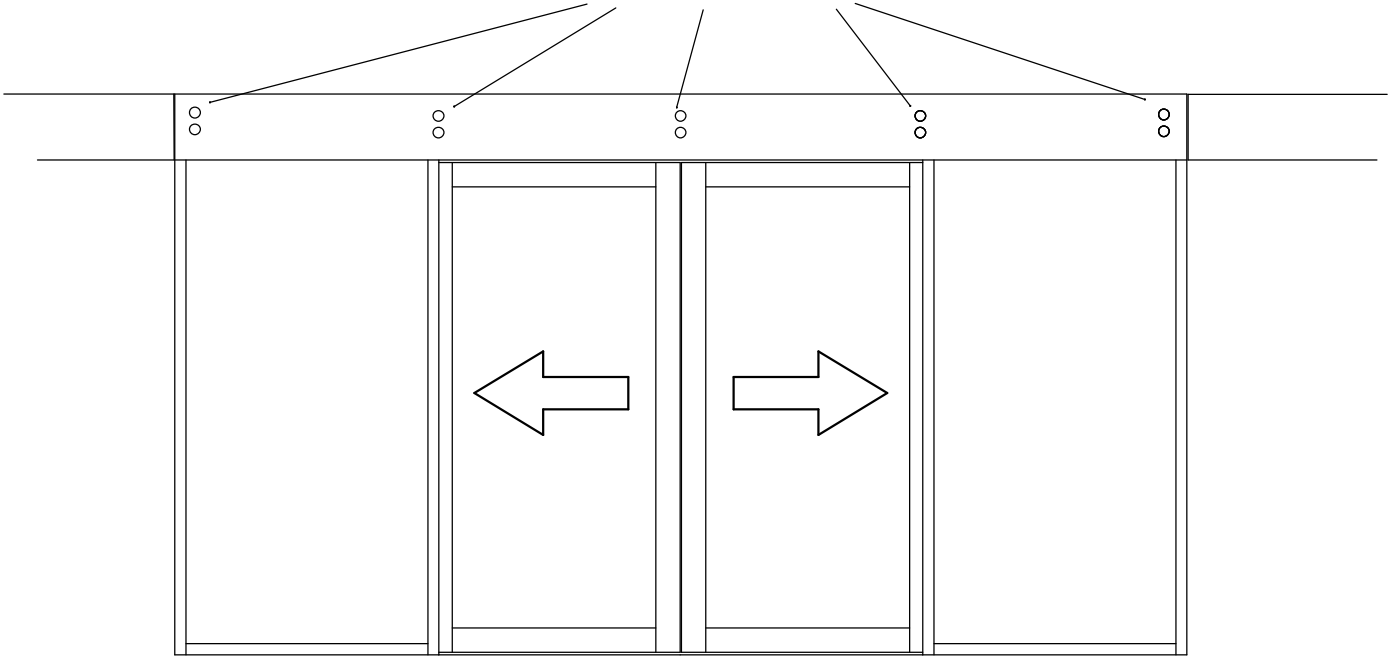

VIEWED FROM INSIDE LOOKING OUT

NOTE : Tek screws may be used for
positioning but NDT for final fixing

NOTE : Suitable fixings are Bolts,
Coachscrews and masonry anchors

OPERATOR MOUNTING

Always refer to website for current drawing

Rubek Automatic Doors
Unit 2, 79 Achievement Way
Wangara, WA, 6065
Tel (08) 9302 3200
Fax (08) 9302 3400
Web www.rubek.com.au
email sales@rubek.com.au
Copyright Rubek Industries 1994-2016

Date
12-02-2016

Scale
N/A

Drawn by
TJD

Sheet
10F1

Checked by
RVS

File name
RBK46

